

HOW TO CHANGE INK CARTRIDGE



1. Open the cover: the ink cartridge moves to the replacement position.




Keep fingers away from the ink cartridge while it is moving to the replacement position.

2. Press down on the back of the ink cartridge to disengage it.



3. Lift out the old ink cartridge.

4. Open the new ink cartridge package, then carefully remove the two protective plastic caps and the protective strips from the cartridge printheads.

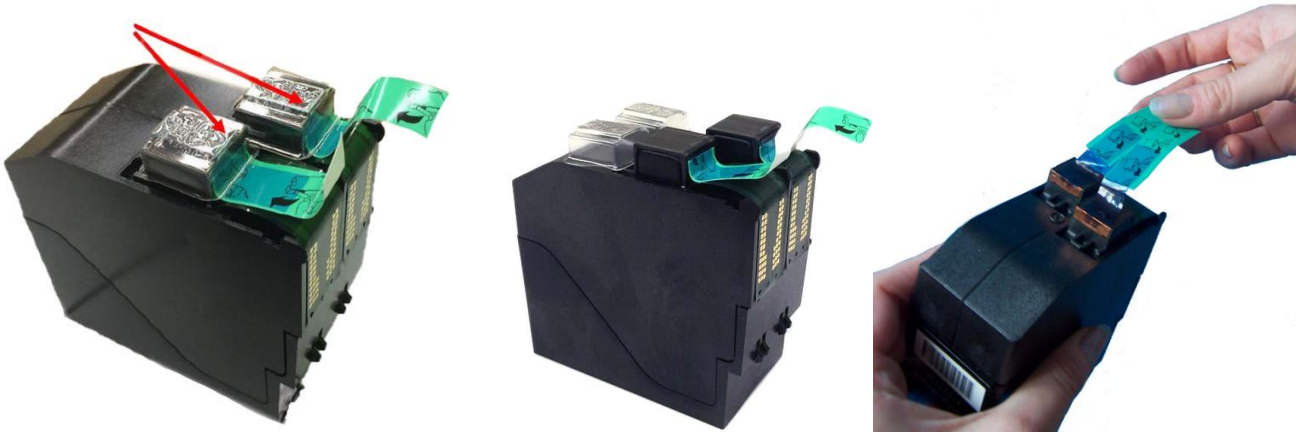

5. Insert the new ink cartridge, and then push it forward until you hear the click.



6. Close the cover.